


11-1 Main_1 Part Schematic Diagram

1-1






11 Schematic Diagrams

✱ This Document can not be used without Samsung’s authorization.

11-2 Main_2 Part Schematic Diagram

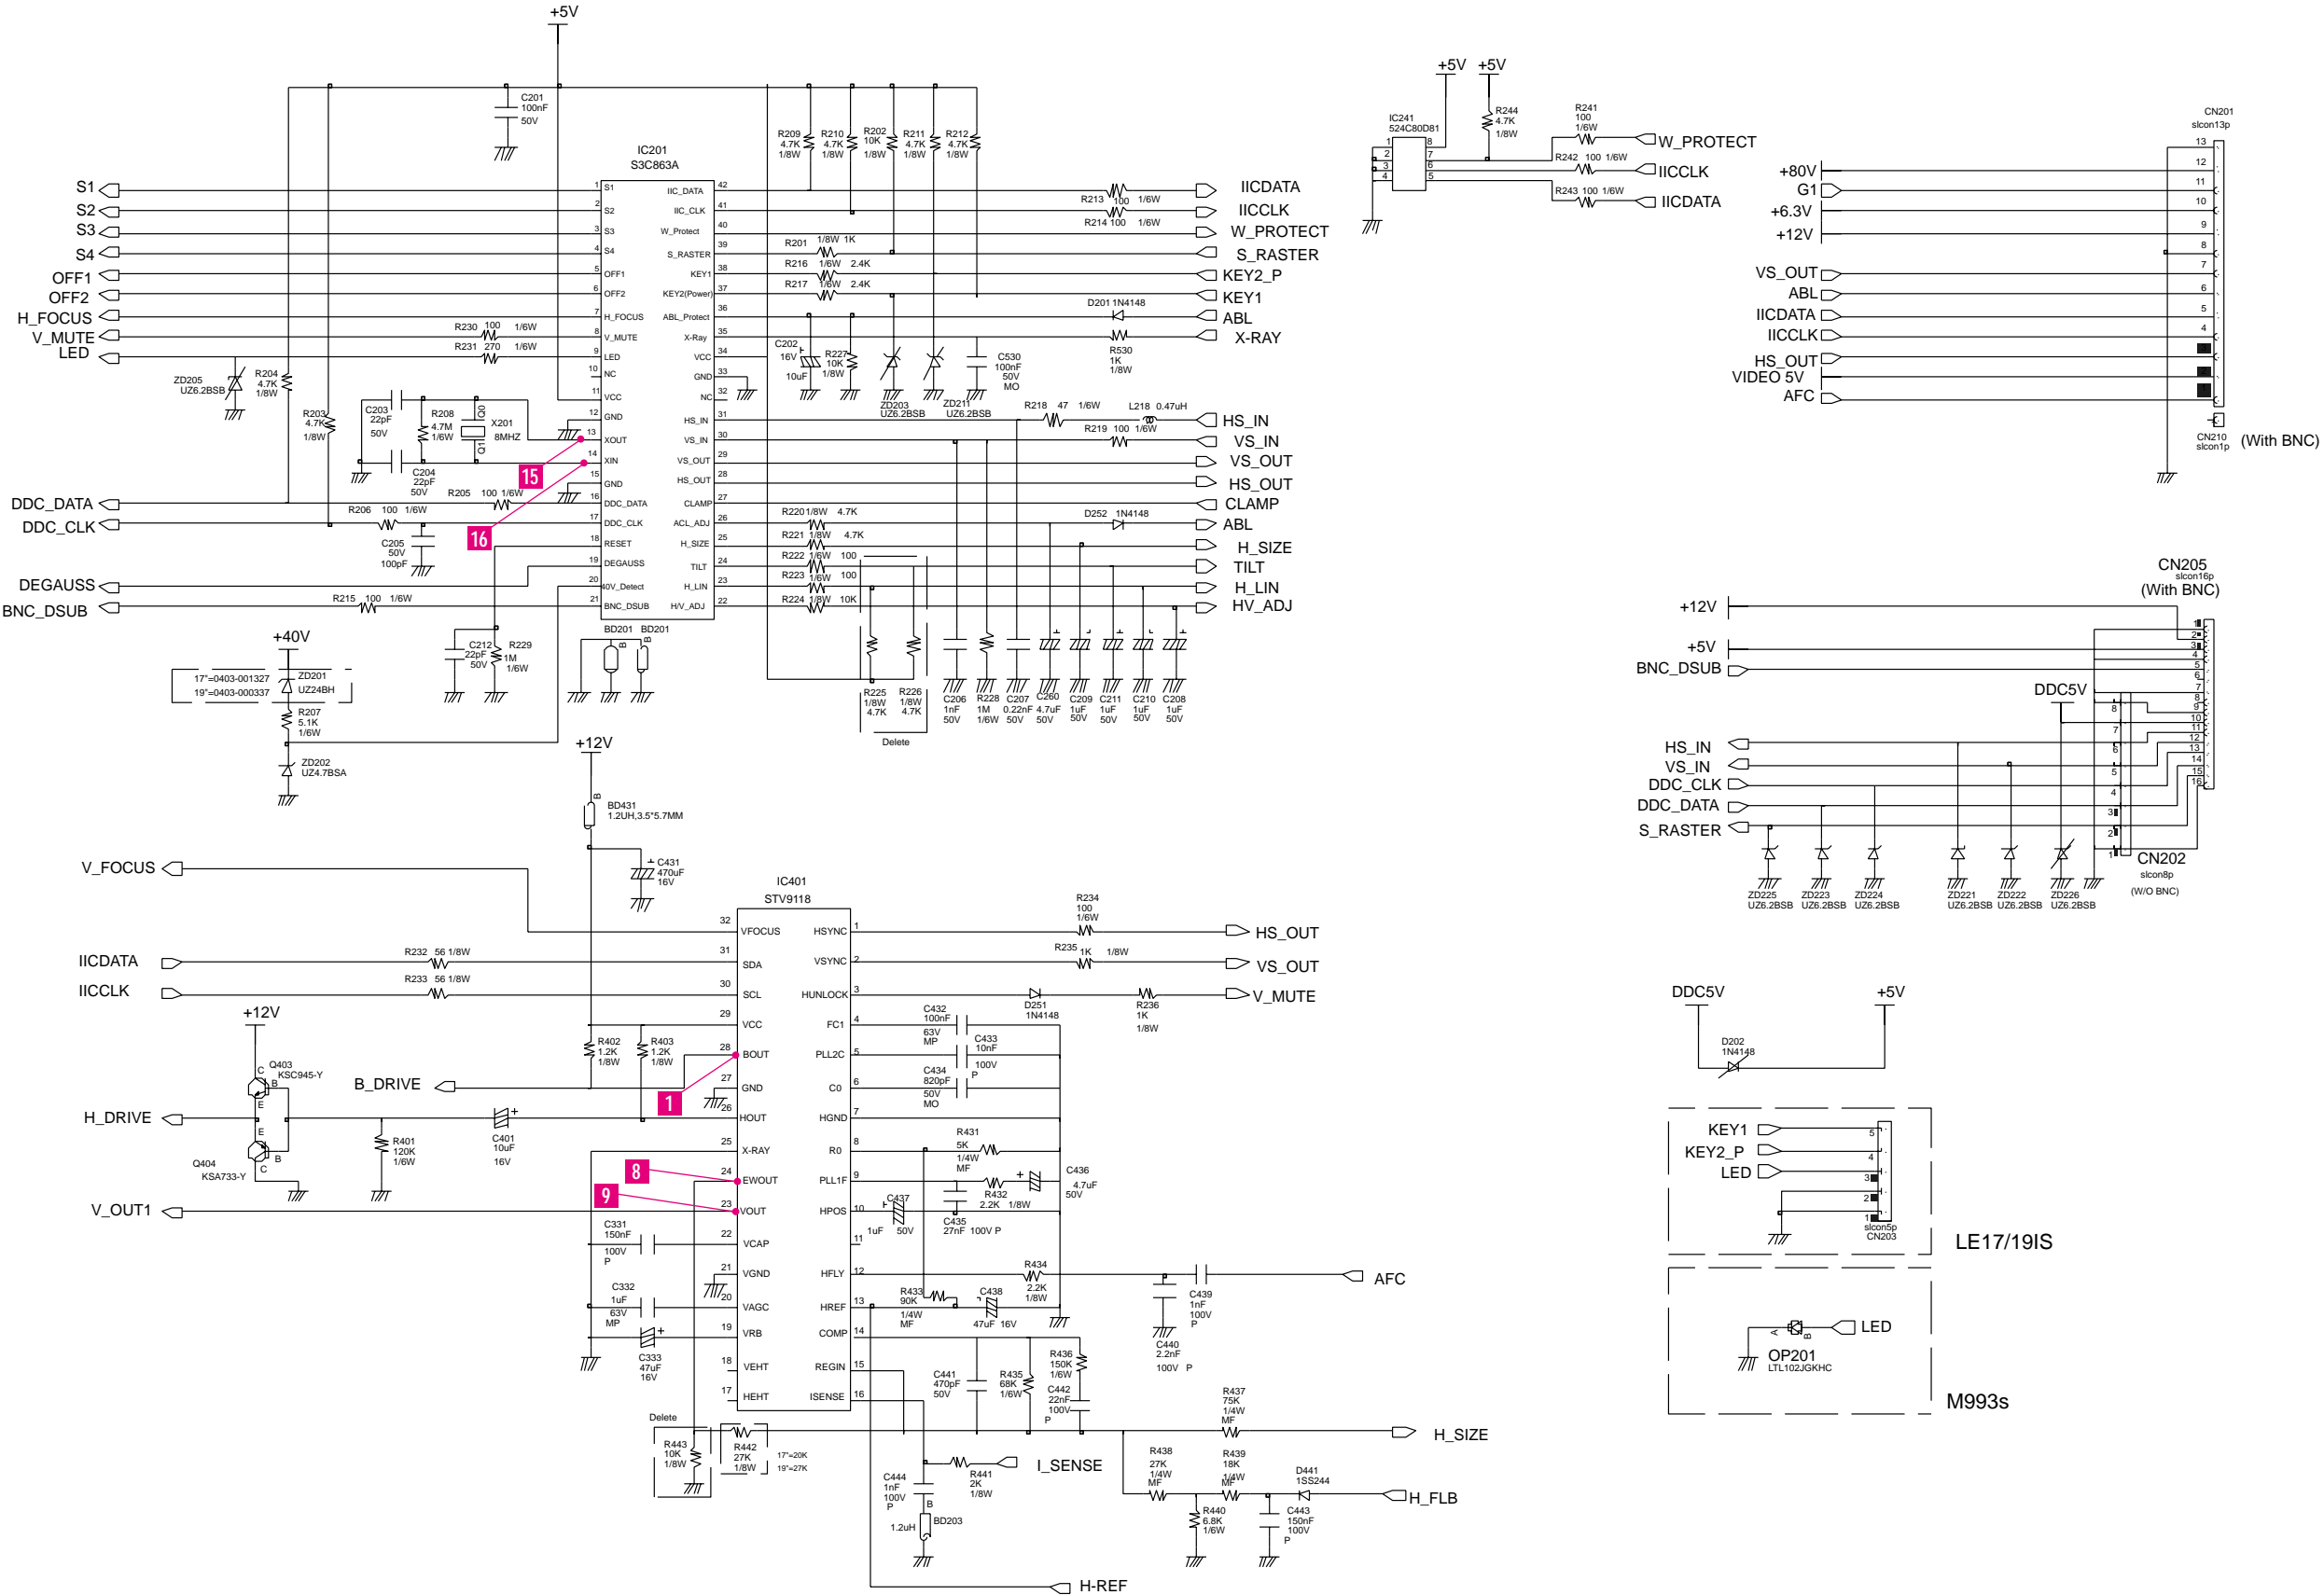


11 Schematic Diagrams






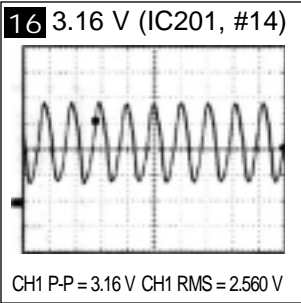
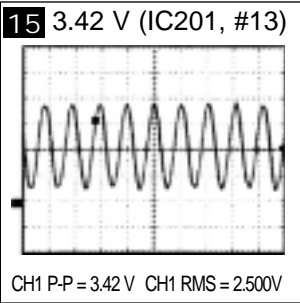
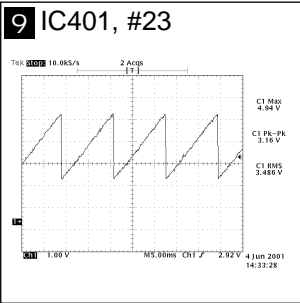
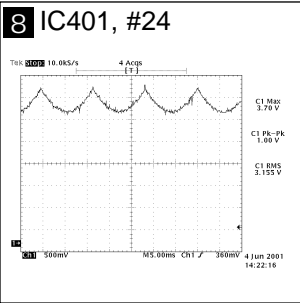
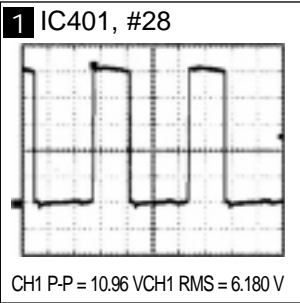


* This Document can not be used without Samsung's authorization.

11-3 Main_3 Part Schematic Diagram

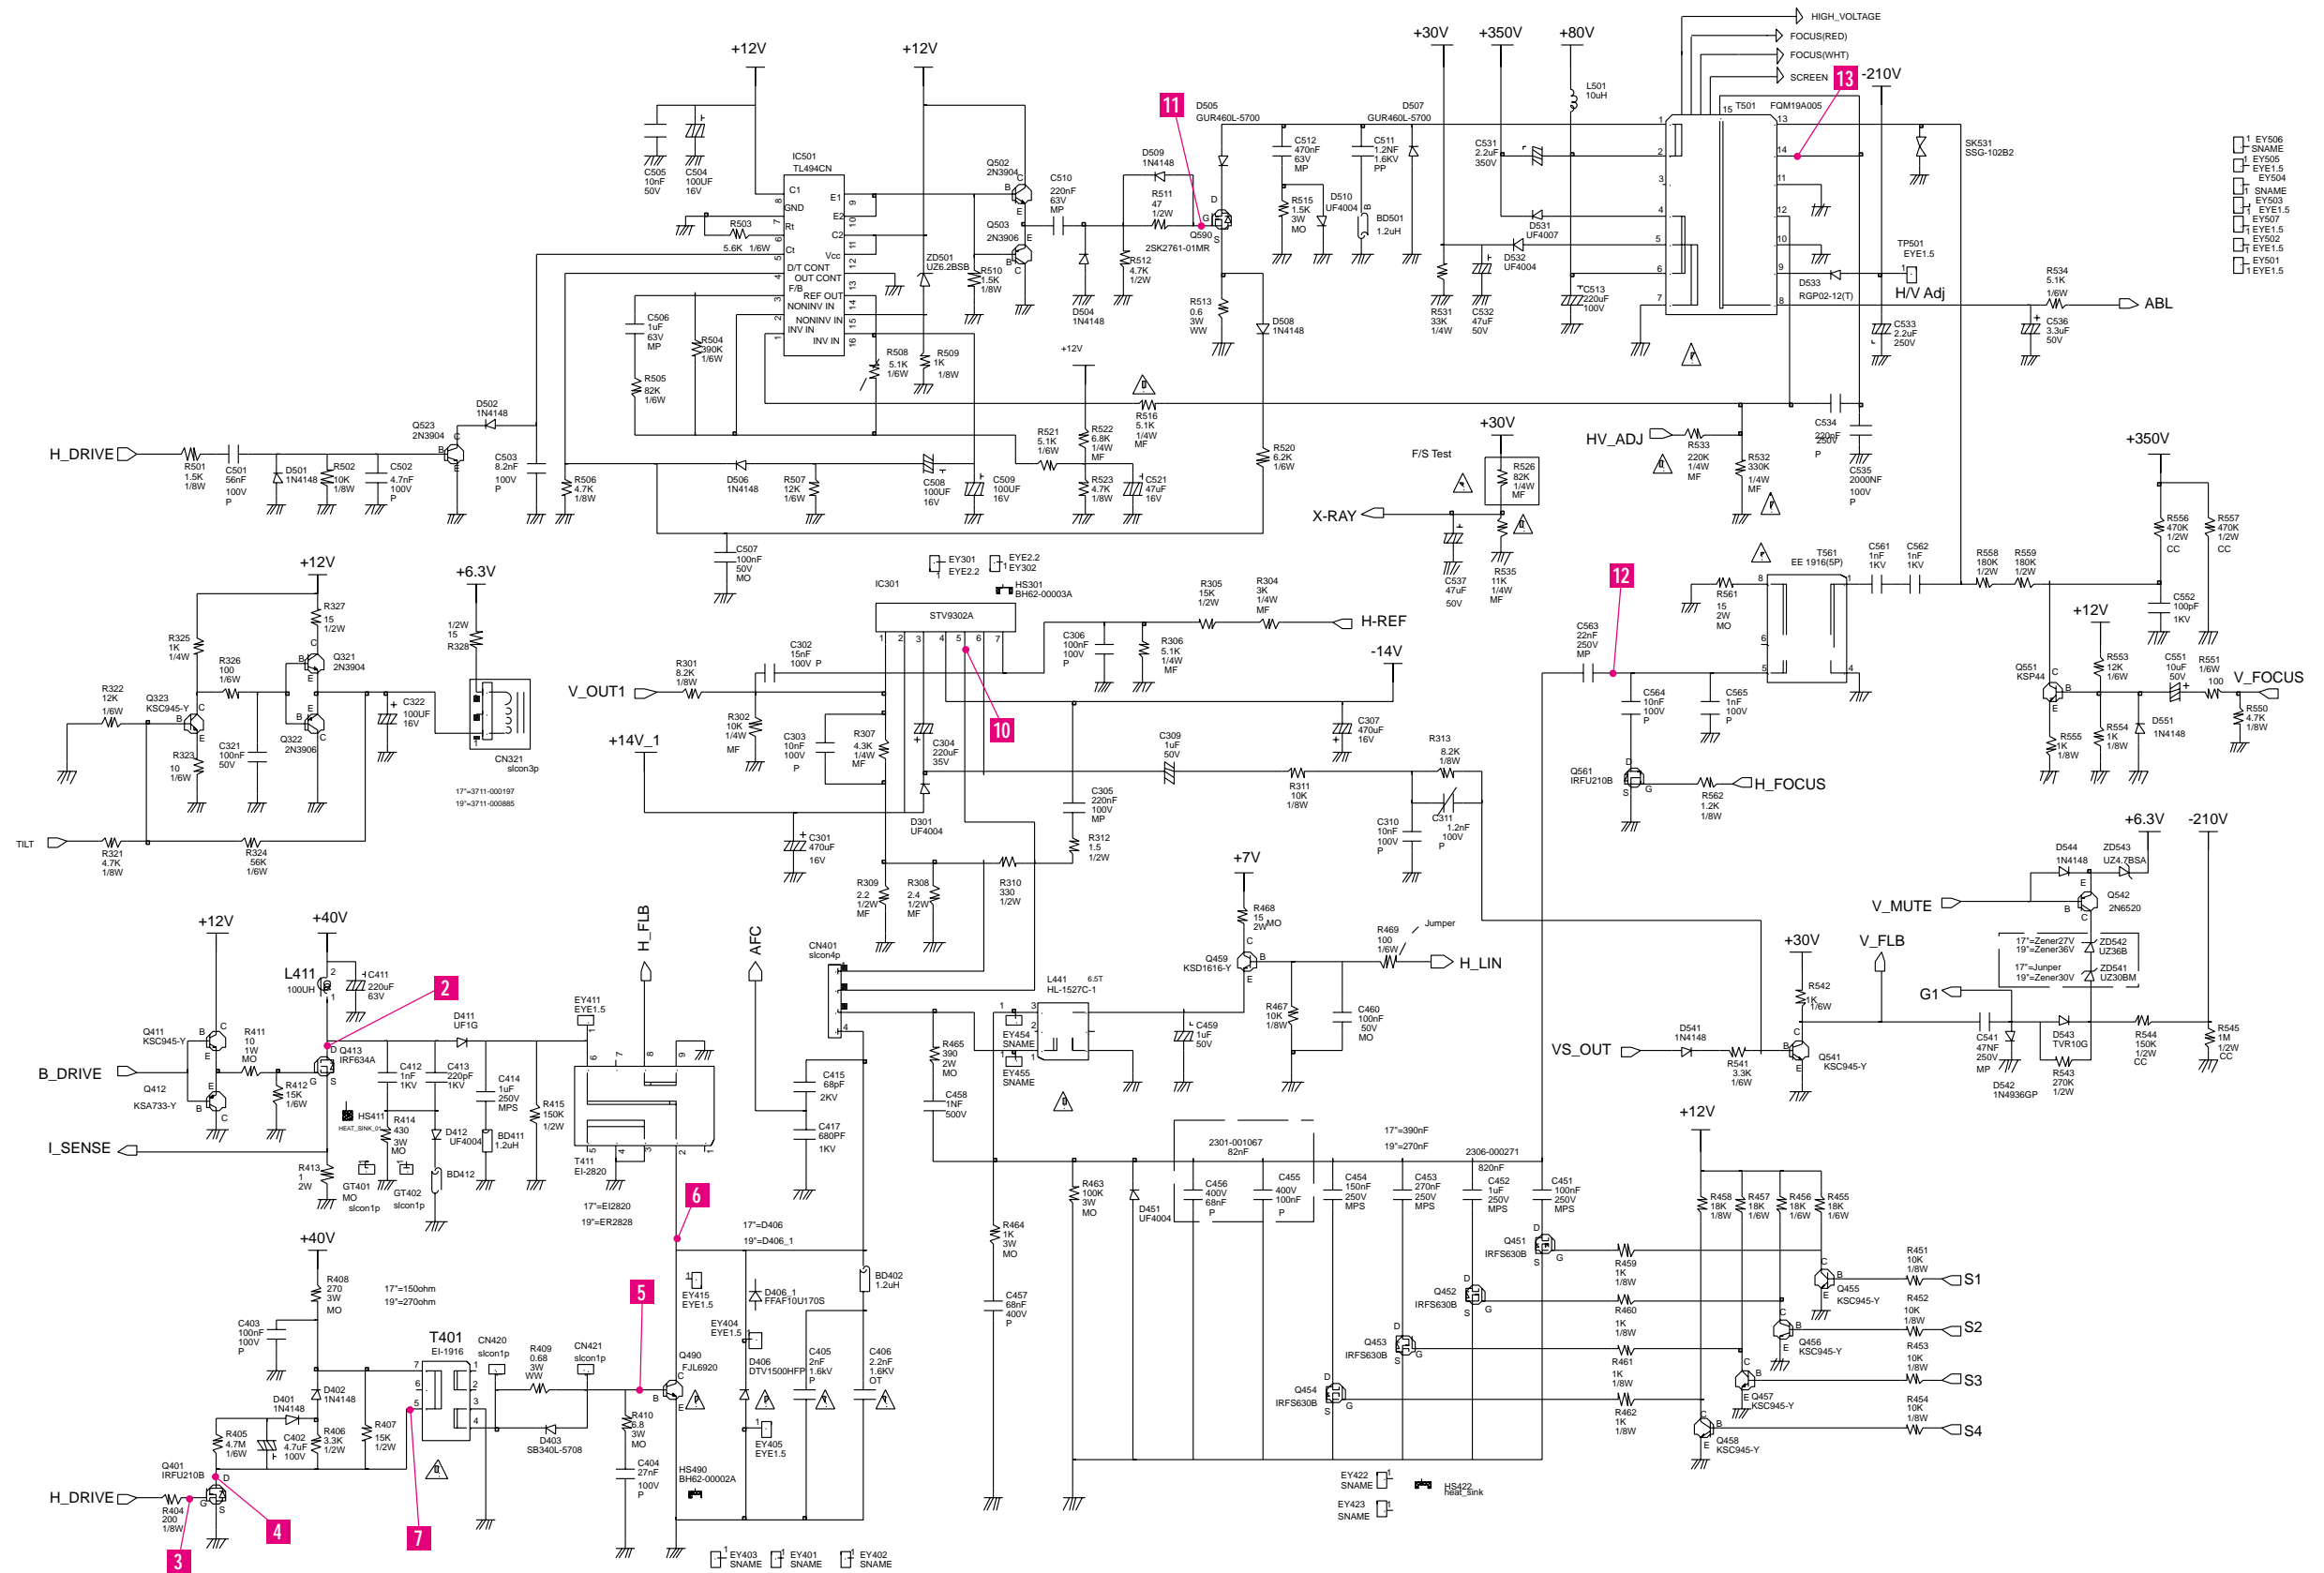


11 Schematic Diagrams

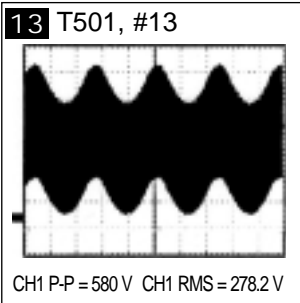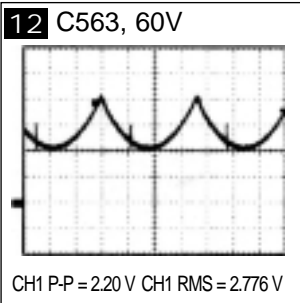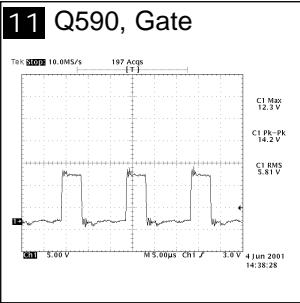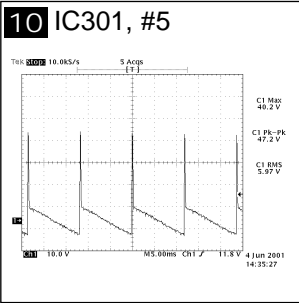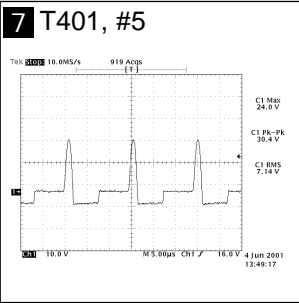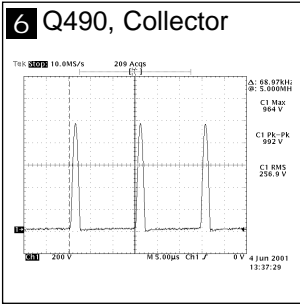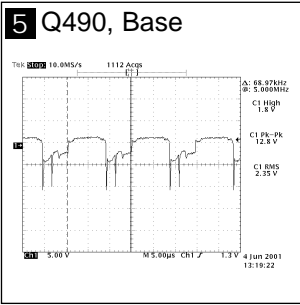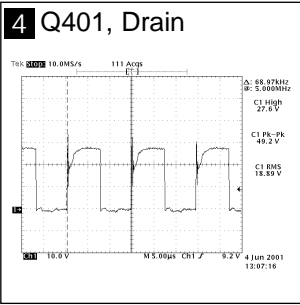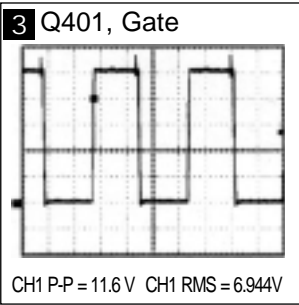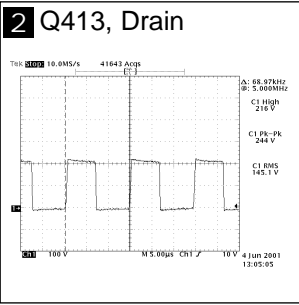

✱ This Document can not be used without Samsung's authorization.


11-4 Video Part Schematic Diagram

MODEL NO : LH19I/17I_VIDEO

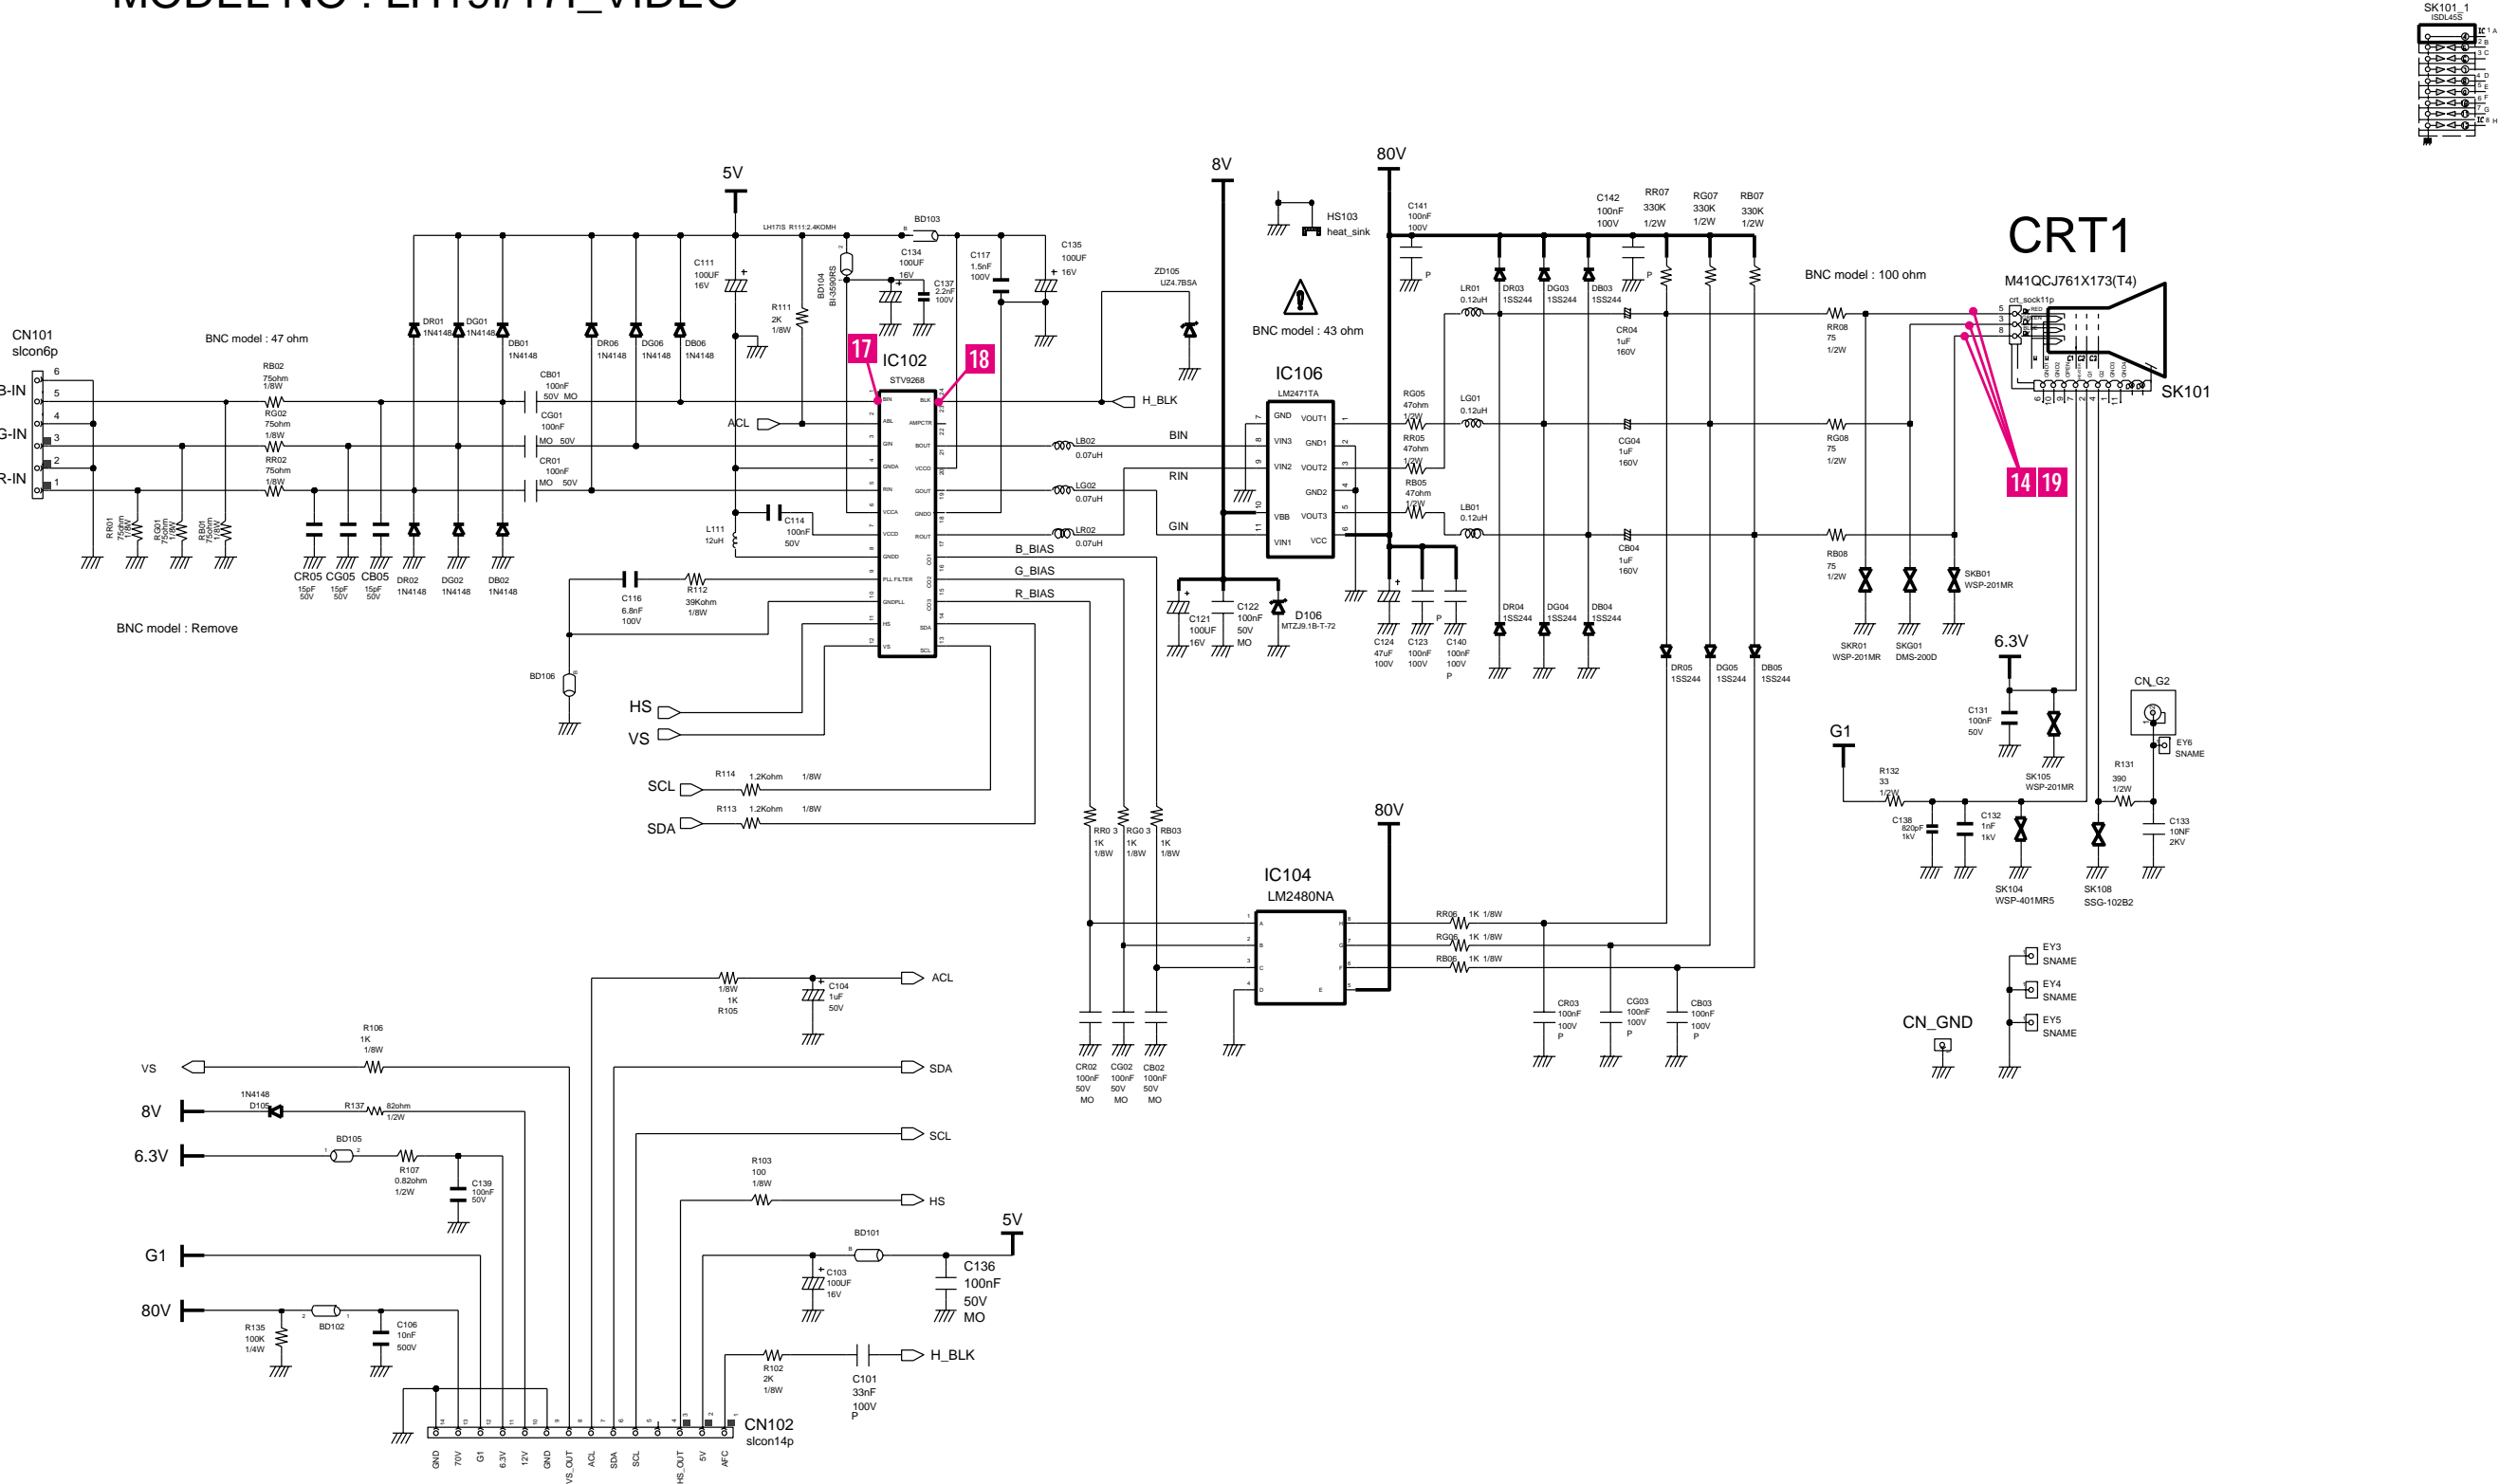


11 Schematic Diagrams


14 CRT Socket, Red, Green, Blue

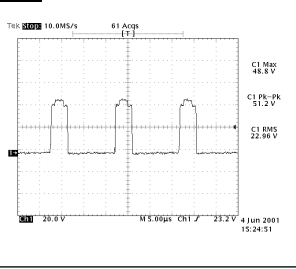


17 IC102, #1

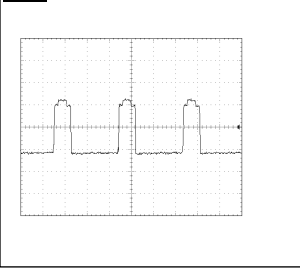

18 IC102, #24

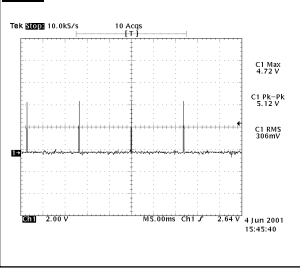

19 R, G, B, Video

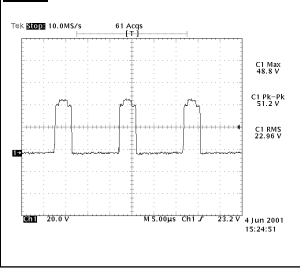

✱ This Document can not be used without Samsung's authorization.

11-5 BNC Part Schematic Diagram

