


Remote Control of Other GRUNDIG Video Recorders

With this remote control you can control different GRUNDIG video recorders independently of each other.

You can use it with your GV 4200 and a second recorder of the series VS 600 to VS 900 and the GV 200 and later models. In order to do so, the recorder must be adapted.

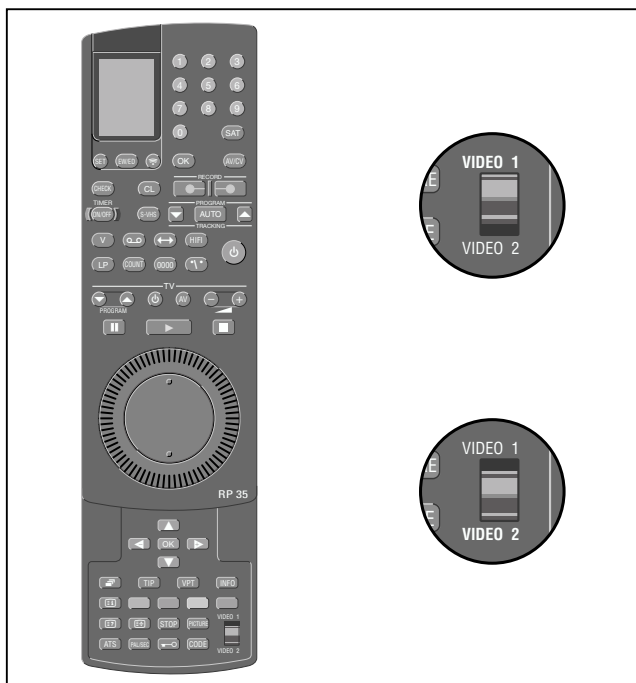

Adapting the second recorder for use with the remote control

In order to control your GV 4200, set the switch to the VIDEO 1 position. An adaption is not necessary in this case.

In order to control the second recorder, it is necessary to change the command structure.

Set the switch to the VIDEO 1 position.

Disconnect your GV 4200 from the mains.

Point the remote control at the second recorder, press the **CODE** button, the numbered buttons ⑧ ⑤ ① ⑦, and then press the **OK** button.

The second recorder will only respond if you set the switch to the VIDEO 2 position.

Reconnect your GV 4200 to the mains.

If you wish to undo the adaption, set the switch to the VIDEO 2 and press the **CODE** button, the numbered buttons ⑧ ⑤ ① ⑥, and the **OK** button consecutively.

Selecting the video level

When the switch is in the VIDEO 1 position, you can control your GV 4200;

When the switch is in the VIDEO 2 position, you can control the second recorder.

If the switch 1 VIDEO 2 is not set to the selected video level when controlling your GV 4200, the indication "VID 1" or "VID 2" on the recorder advises you that you must switch the remote control to the other video level.

Remote Control of a TV set

With this remote control RP 35 you can also control GRUNDIG colour TV sets that use the remote control TP 590 and up.

The functions that can actually be carried out via remote control depend, of course, on the technical features of your GRUNDIG TV set.


Preparation

Press the mains button on the TV set to switch it on.

Point the the remote control at the TV set.


Programme selection

You can use the  PROGRAM  buttons to select the programme positions step by step, from 1 to 99.

 
Repeatedly press the  button to select the programme positions AV1, AV2, etc.

Adjusting the volume

When you press the  button, the volume decreases.

When you press the  button, the volume increases.

Stand-By

During television pauses, you can switch your TV set to stand-by by pressing the  button.

Press the  button to switch the TV set back on.